

Written By: dalton hale







## TOOLS:


- [Metal Spudger Set](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Heavy-Duty Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Motherboard

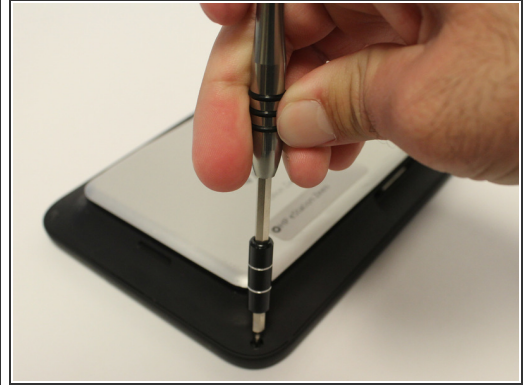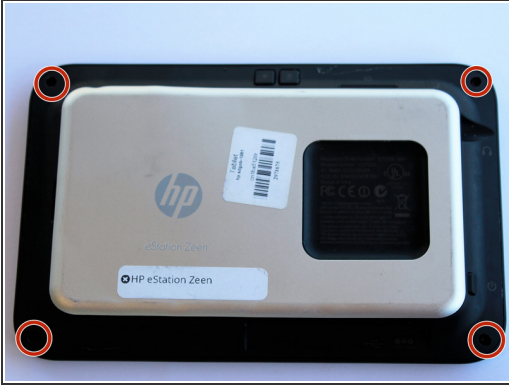

- Remove the screw caps using the metal spudger.
- Remove the four 6mm Phillips screws using the Phillips #0 screwdriver.


## Step 2

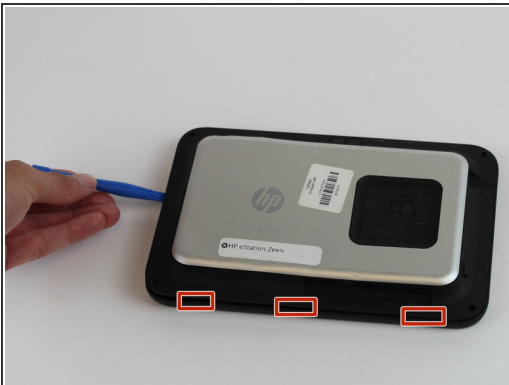

- Unclip each side of the back cover by inserting the plastic opening tool and sliding it along the edge.
- Remove the back panel by lifting the panel away from the device.




## Step 3

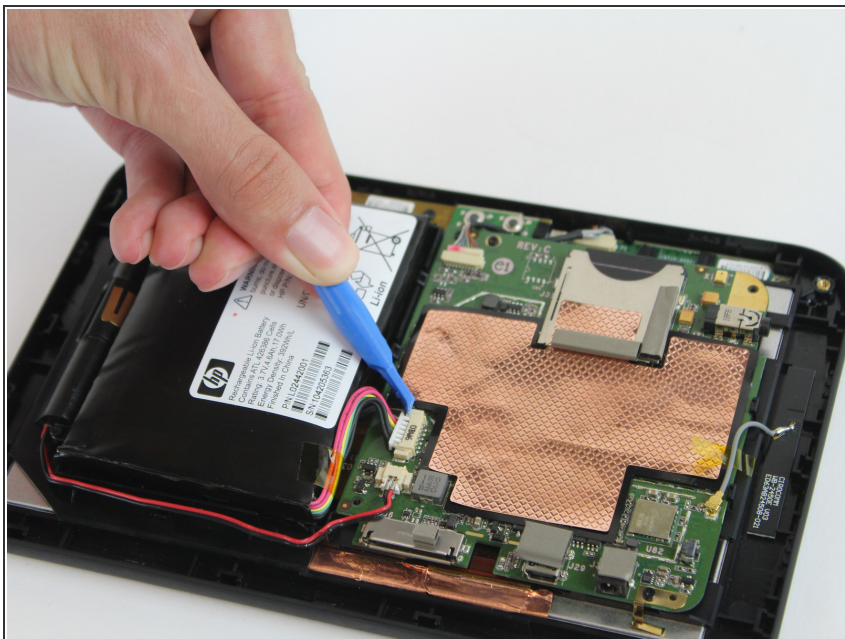

- Disconnect battery clip with plastic opening tool.

⚠ The clip it is very fragile.


## Step 4

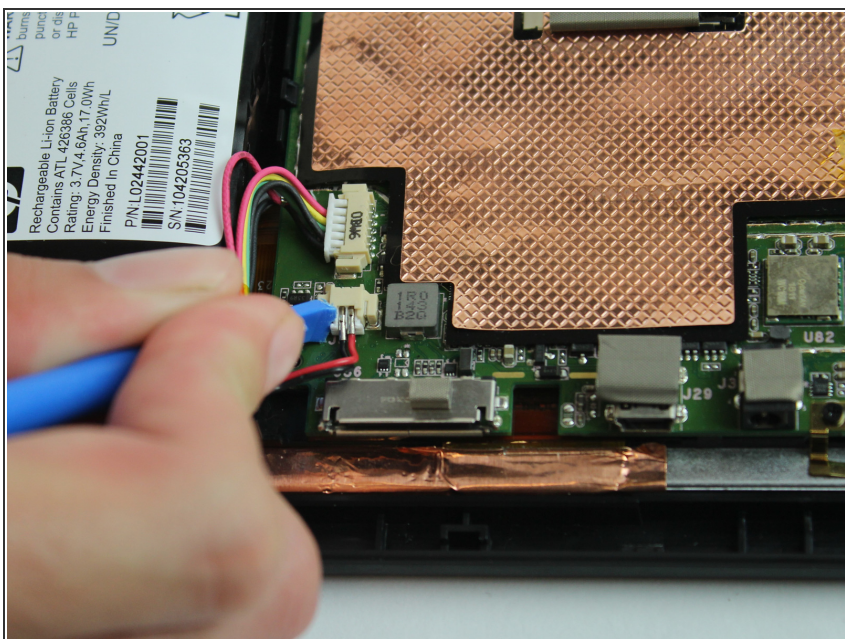

- Disconnect the speaker terminal with plastic opening tool.

⚠ The clip is very fragile.

## Step 5

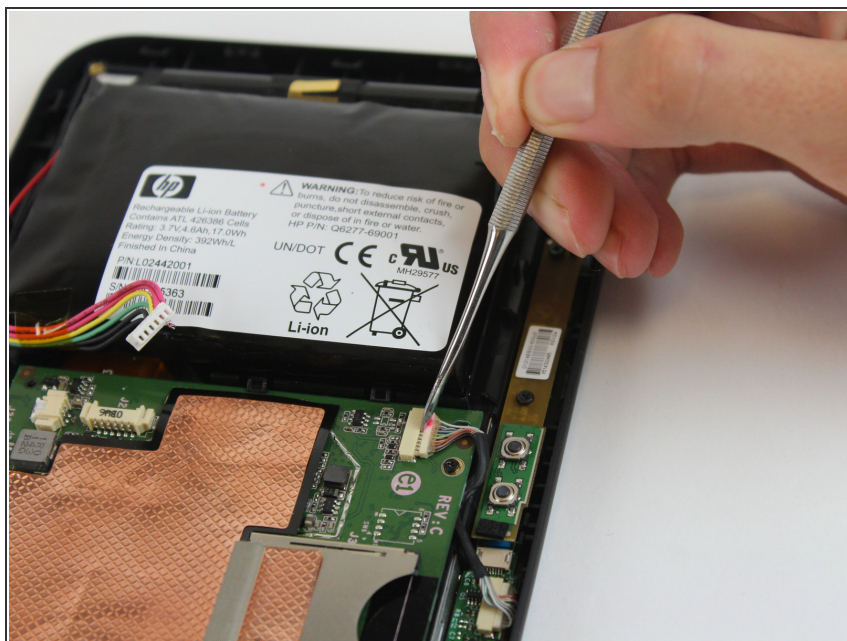

- Disconnect the the volume button clip with metal spudger tool.

⚠ The clip is fragile.



## Step 6



- Disconnect the ground wire from the motherboard with tweezers.





## Step 7

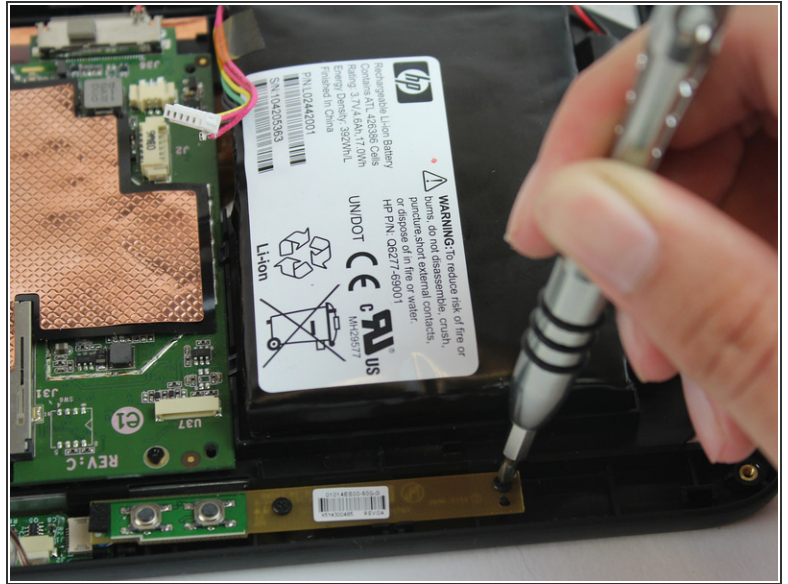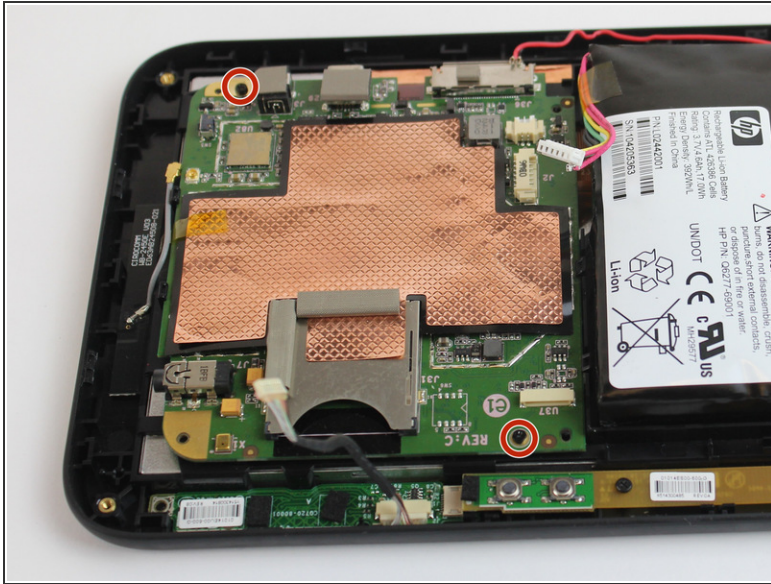


- Remove the two 6mm Phillips screws with Phillips #0 screwdriver.

## Step 8

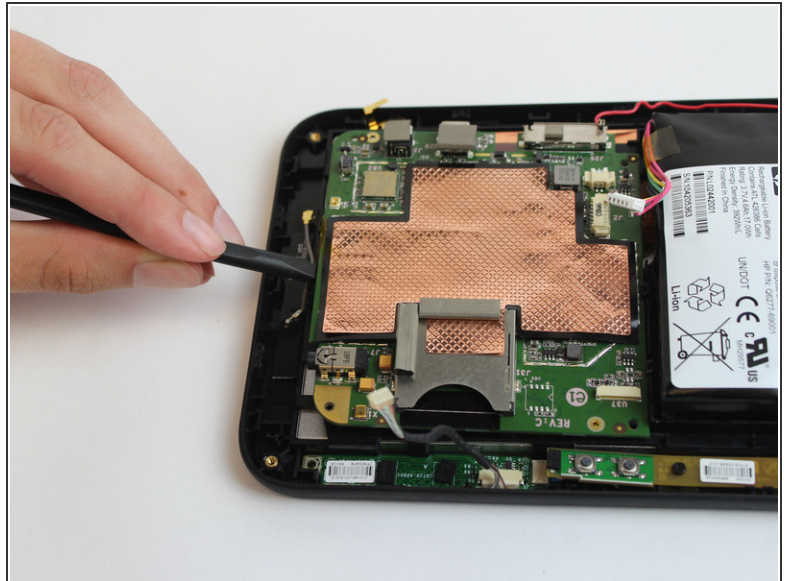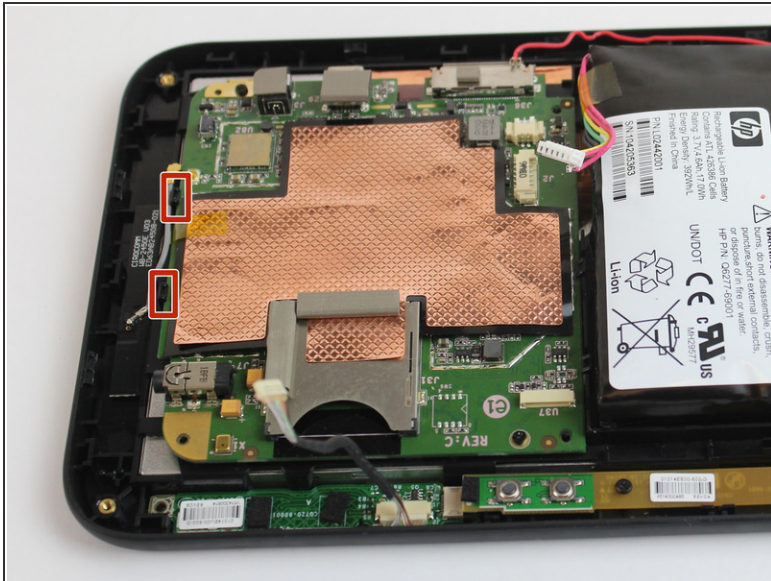

- Pry off the clips that hold the motherboard down with the plastic spudger.

## Step 9

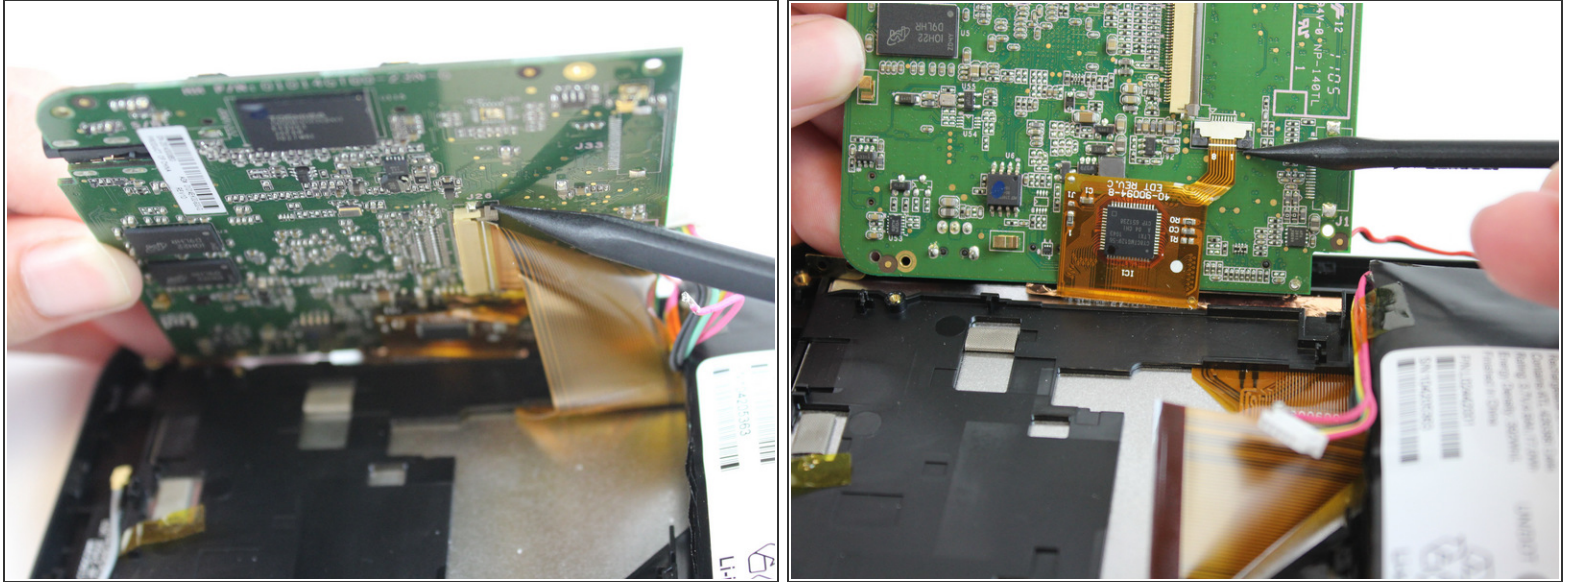

- Lift motherboard up to expose the ribbons on the back.
- Lift the grey tabs to disconnect the ribbons with plastic spudger.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 09:50:42 AM.